


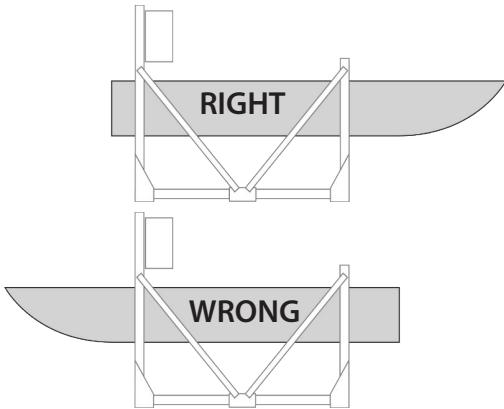

IMPORTANT:

This lift is designed for the rear of the boat to be placed closest to the winch. Failure to properly load boat could cause lift to fail and void the warranty.



Owner's Manual

LSV75120C

LS5000B leg bundle
LS7001C post bundle
LS7012C cradle bundle 120"
LS7003C spreader bundle
LS7004C bunk bundle
LS7005C accessory box
LS5007B diagonal bundle
W8L 7500# Lorenz winch
MK1007 solar panel 24v
MK1012 motor kit battery tray

LSV75120CP-U

LS5000B leg bundle
LS7001C post bundle
LS7012C cradle bundle 120"
LS7003C spreader bundle
LS5004BU under deck
bunk bundle
LS7005C accessory box
LS5007B diagonal bundle
W8L 7500# Lorenz winch
MK1007 solar panel 24v
MK1012 motor kit battery tray

LSV75120CP

LS5000B leg bundle
LS7001C post bundle
LS7012C cradle bundle 120"
LS7003C spreader bundle
LS7004C bunk bundle (2)
LS7005C accessory box
LS7011C accessory box
LS5007B diagonal bundle
W8L 7500# Lorenz winch
MK1007 solar panel 24v
MK1012 motor kit battery tray

READ CAREFULLY - FAILURE TO FOLLOW INSTRUCTIONS AND SAFETY RULES MAY RESULT IN SERIOUS INJURY.
VISIT OUR WEBSITE FOR TIPS AND FAQs.



WARNING

DO NOT OPERATE THIS HOIST WITHOUT FIRST STUDYING THE OWNER'S MANUAL.

1. Before operating this lift be sure to understand all operating procedures and safety precautions.
 2. NEVER operate lift with people on board boat or near any part of lift.
 3. NEVER work or play on, around or under lift.
 4. NEVER exceed the rated capacity of lift. Doing so may cause lift to fail.
 5. Before use visually inspect SHEAVES and CABLE for wear or fraying. Follow proper maintenance procedures.
- Failure to follow these procedures could cause lift to fail and result in death or serious personal injury.**

Z116

CAUTION


DO NOT CRANK PAST STOP POSITION.
When raising lift be aware that when moving components contact frame you have reached maximum height.
Turning wheel past this point may cause personal injury and will cause damage to lift that is not covered by warranty.

Z119

Manufacturers of Lakeshore Products

855 East Chicago Road, Quincy, MI 49082

www.lakeshoreproducts.com • tel: 517.639.3815 • fax: 517.639.4576

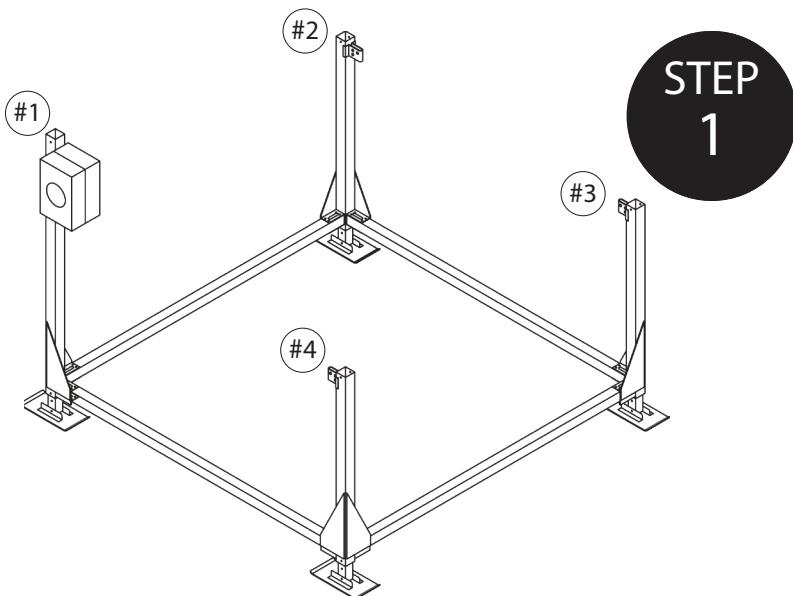

STEP 1

PARTS FOR THIS STEP


MAINFRAME POSTS (A,B,I,O)*	4
LEGS (R,S)	4
WINCH (H)	1
SIDE MAINFRAME SPREADERS (M)	2
F/R MAINFRAME SPREADERS (P)	2
BOLT PACKAGE STEP 1	1

* denotes letter on exploded view

1.1 attach LEGS

Slide 4 LEGS into the 4 MAINFRAME POSTS using:


- 4 – 3/8" x 4-1/2" hex bolts
- 4 – 3/8" nylon lock nuts

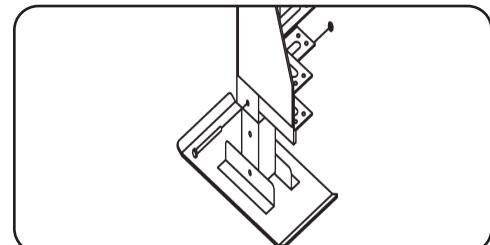

1.2 attach WINCH

Remove the three screws that hold on the WINCH cover. Lay POST #1 on its side and attach winch using:

- 2 – 1/2 x 5-1/2" hex bolts
- 2 – large aluminum washers
- 2 – 1/2" nylon lock nuts

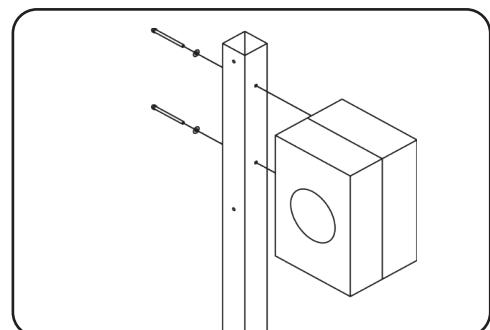

1.3 arrange MAINFRAME POSTS


Stand all 3 shorter MAINFRAME POSTS on a flat area, arranged as shown above.

1.4 attach SIDE MAINFRAME SPREADER tubes

Position one SIDE MAINFRAME SPREADER tube between POST #2 and #3. The SIDE MAINFRAME SPREADER tubes are 120" long with the large slots in each end.

Bolt in place using:

- 2 – 3/8" x 5" hex bolts
- 4 – 3/8" flat washers
- 2 – 3/8" nylon lock nuts

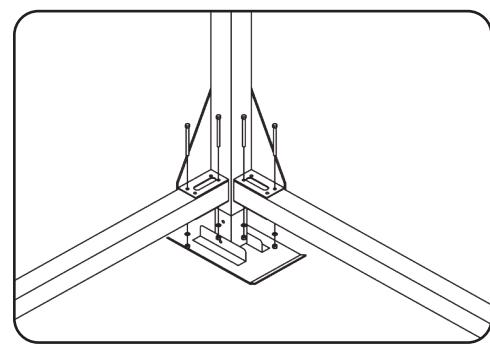


1.5 attach FRONT/REAR MAINFRAME SPREADER tubes

Position one F/R MAINFRAME SPREADER tube between POST #3 and #4. This is the front of the lift. Bolt in place using:

- 2 – 3/8" x 5" hex bolts
- 4 – 3/8" flat washers
- 2 – 3/8" nylon lock nuts



at each POST. Repeat with other F/R MAINFRAME SPREADER between POST #1 and #2, bolting only to POST #2. Position POST #1 and bolt in place.

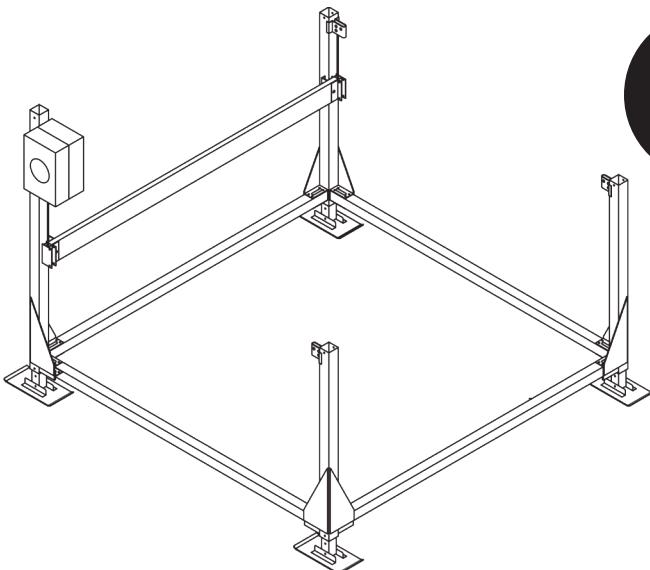

STEP 2

PARTS FOR THIS STEP

LIFT CRADLE (G) 1
BOLT PACKAGE STEP 2 1


2.1 attach LIFT CRADLE

Position the **LIFT CRADLE** between **POST #1** and **#2**.

NOTE: the **LIFT CRADLE** has a cable with a loop on only one end.


Attach the loop end to **POST #2** in the low hole closest to the **POST** with:

- 1 – 3/4" x 3" hex bolts
- 1 – 3/4" nylon lock nuts

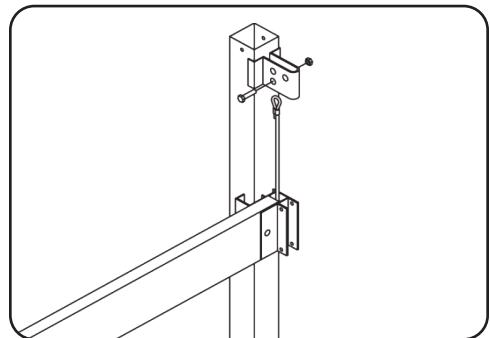

2.4 attach CABLE

The cable attaches to the black drum at the bottom of the **WINCH**. It passes through a hole in this drum and is held in place by a plate and 2 set screws located between the holes. The drum will have to be turned until the set screws appear. Loosen the screws with the 5/32" allen wrench supplied with your lift. Then pass the cable through the hole in the drum until 1" of the cable sticks between the plate and the drum, and tighten the set screws.

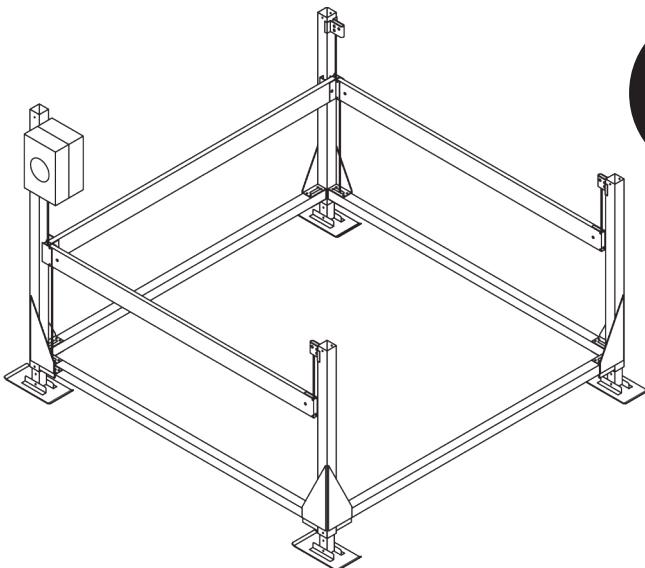

STEP 3

● PARTS FOR THIS STEP

CRADLE SPREADERS (K) 2


BOLT PACKAGE STEP 3/4 1

BOLT PACKAGE REINFORCING PLATE 1

3.1 attach CRADLE SPREADER

Attach one end of the **CRADLE SPREADER** tube to the **FRONT CRADLE** near **POST #1**. Use:

- 2 – cradle corner reinforcing plates
- 4 – 3/8" x3" hex bolts
- 4 – 3/8" nylon lock nuts

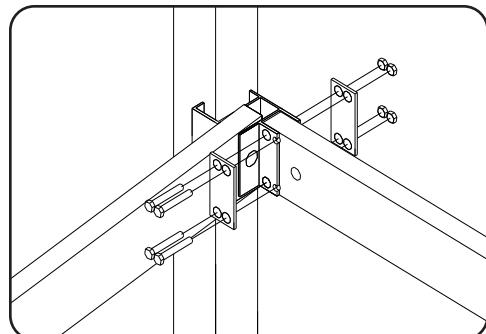


3.2 attach SIDE CABLE

Feed the end of the **CABLE** that hangs down through the holes in the **MAINFRAME SPREADER** tube by **POST #1** and pull out the bottom of the lift. Using:

- 1 – cable channel
- 1 – cotter pin 1/2" x 2"


Place the **CABLE** loop through the slot in the cable channel and secure with the cotter pin.

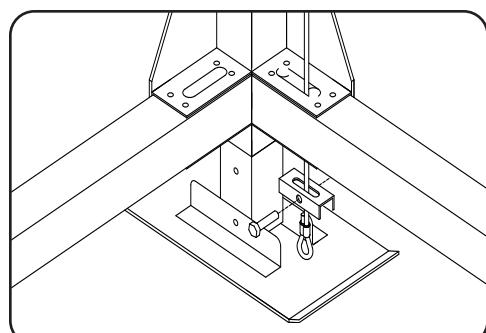

3.3 attach SIDE CABLE


Take the opposite end of the cable that comes up out of the **SPREADER** and attach it to the top of **POST #4**. Use the holes furthest away from the **POST** and attach using:

- 1 – 3/4" x 3" hex bolt
- 1 – 3/4" nylon lock nut

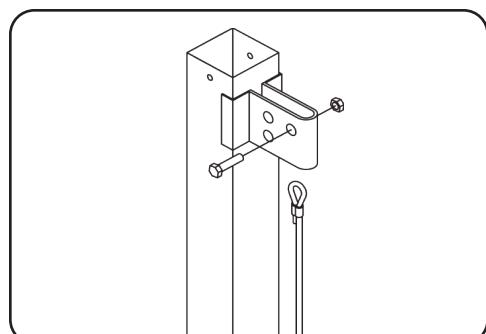

3.4 repeat

Repeat for other **CRADLE SPREADER**.

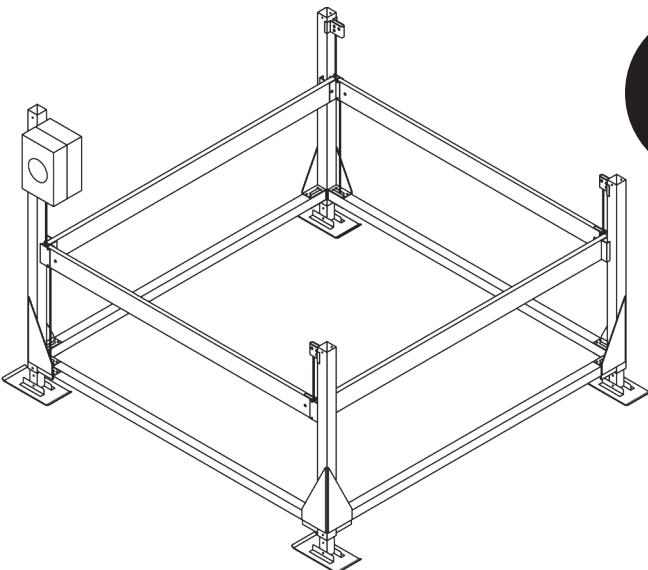

STEP 4


PARTS FOR THIS STEP

LEVELING CRADLE (N) 1
BOLT PACKAGE STEP 3/4 1

4.1 attach LEVELING CRADLE

Set the **LEVELING CRADLE** on the ends of the **CRADLE SPREADER** tubes. Attach to the **SPREADERS** using:

- 4 – cradle corner reinforcing plates
- 8 – 3/8" x3" hex bolts
- 8 – 3/8" nylon lock nuts

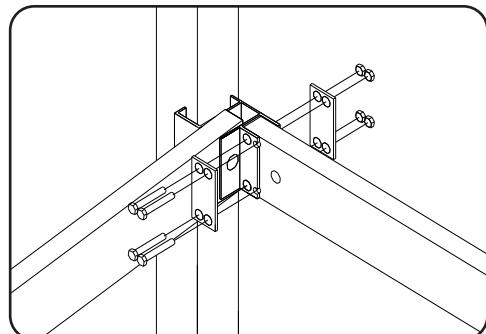


4.2 attach CABLES at bottom

Feed the two down cable ends through the side **MAINFRAME SPREADER** tubes and out the bottom of the lift. Attach using

- 1 – cable channel
- 1 – cotter pin 1/2" x 2"


Place the **CABLE** loop through the slot in the cable channel and secure with the cotter pin.

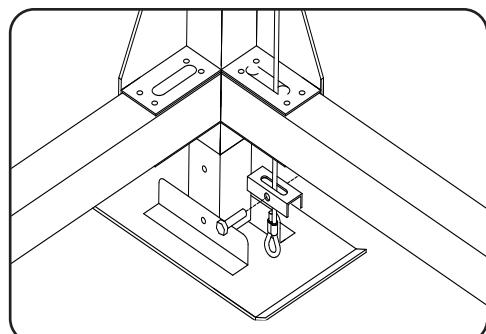

4.3 attach CABLES at top


Attach the two up ends of the **CABLES** to **POST #3** and **#4**. Use the holes closest to the **POST**, starting with both **CABLES** in the lowest holes. If the rear **CABLES** appear too loose, try moving one **CABLE**, or both to the next hole. Bolt in place using:

- 1 – 3/4" x 3" hex bolt
- 1 – 3/4" nylon lock nut

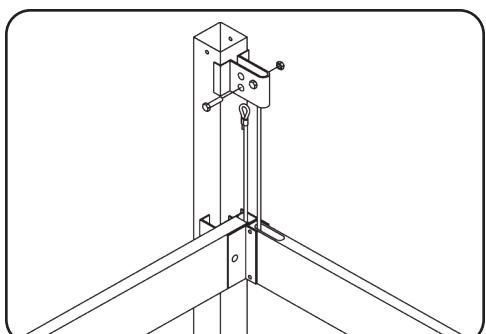


STEP 5

● PARTS FOR THIS STEP		FOR LSV75C	FOR LSV75CP
BUNK ASSEMBLY (G)	2	4	
BOLT PACKAGE STEP 5	1	2	

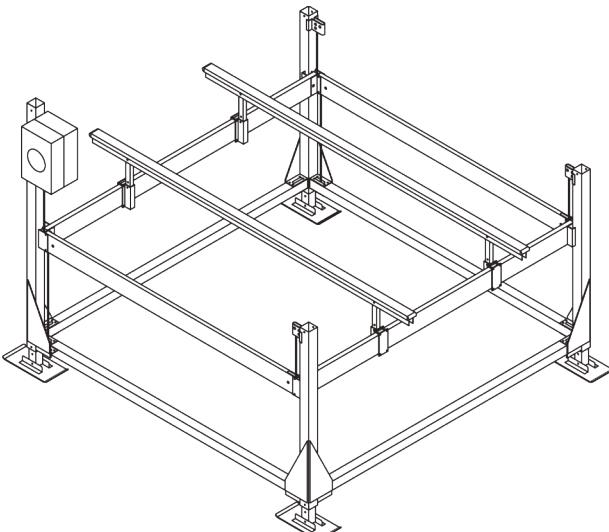

FOR LSV75120C and LSV75120CP

● PARTS FOR THIS STEP		FOR LSV75CP-U
UNDER DECK BUNK LEGS (C)	4	
BOLT PACKAGE STEP 5	1	

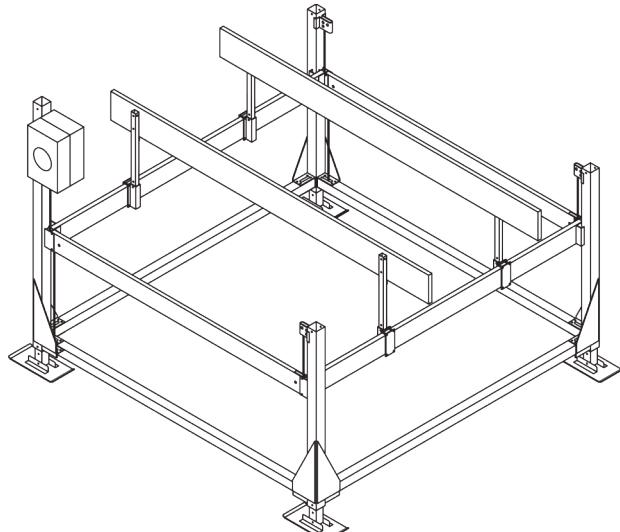

FOR LSV75120CP-U

5.1 attach BUNKS

Attach **BUNK SOCKETS** and **BUNK SOCKET PLATES** making sure to place the sockets towards the inside of the lift using:

- 16 – 3/8" x 3" hex bolts
- 16 – 3/8" nylon lock nuts

Install the **BUNKS** by sliding into the **BUNK SOCKETS** and securing with:

- 4 – 3/8" x 2-1/2" hex bolts
- 4 – 3/8" nylon lock nuts

5.2 adjust BUNKS

Move your lift into the water.

Adjust the height and position of the **BUNKS** so that they cradle your boat and keep the bottom of the boat off the **CRADLE**.

NOTE: For LSV75120CP repeat STEP 5.1 and STEP 5.2 for the second set of bunks.

5.3 adjust LEGS

Adjust the lift **LEGS** so that the lift sits level in the water, within 3" to 6" is acceptable.

5.4 install DIAGONALS

Install the **DIAGONAL BRACKETS** by snapping them over the center of the **SIDE MAINFRAME SPREADERS**. Bolt the **DIAGONALS** from this bracket to the hole at the top of each **POST** on the outside of the lift with:

- 4 – 3/8" x 1-1/4" hex bolts for center bracket
- 4 – 3/8" x 5-1/2" hex bolts for top of post (found in lift bolt package)
- 8 – 3/8" hex lock nuts

LS7005C accessory package

BPV75C	Bolt Package V75C	1
20902	Bunk Socket Bracket	4
20904	Bunk Socket Plate	4
MK1015	winch pendant box	1
21072	battery jumper cable	1

5.5 install BATTERY TRAY

Assemble **BATTERY TRAY** following instructions.

5.6 install SOLAR PANEL

Install the **SOLAR PANEL** following instructions.

LS7011C accessory package

20902	Bunk Socket Bracket	4
20904	Bunk Socket Plate	4
21068	STEP 5	1

hints

- A. Shallow water? Remove the adjustable legs to make the lift sit even lower in the water. In this position the Cradle can be placed lower than on any other lift available.
- B. Deep water? Extension legs are available in 4', 5', and 6' lengths. Call your Dealer for pricing.
- C. The front Cable will last much longer if you grease the first 5' to 8' that goes into the winch.
- D. Do not over crank your lift. Be sure to notice the maximum height that your lift will rise to and STOP when you reach that height. Failure to do so will damage your lift.

important

- A. Your LSP Lift will only protect your personal watercraft if the craft is lifted well above the level of the water. In larger lakes or during storms, large waves may lift the craft from the lift or tip the lift over, causing damage both to the craft and the lift. You must take precautions to protect your craft and lift from these conditions. If your craft suffers damage from high waves LSP, Inc. will not accept responsibility for such damage.
- B. Inspect your lift often for signs of wear or improper operation. Be aware of normal cranking force. Any increase in cranking force is a sign that something is wrong. DO NOT USE the lift if any parts are worn or damaged, replace immediately.
- C. Pay attention to the condition of your cable. A frayed or rusted cable can lead to failure of the lift. Replace it immediately. Greasing the cable, especially where it enters the winch, can extend its life.
- D. A second caution decal is provided in the accessories box. If after assembly the decal is not easily seen then install the extra decal so that anyone using the lift can read it. NEVER let anyone operate the lift unless they are familiar with all safety rules.
- E. NEVER let anyone play on, around, or under the lift.

BPV75C bolt package

X422	3/8" x 5-1/2" hex bolt	4
22002	CORNER REINFORCING	1
22001	reinforcing plate	8
X412	3/8" x 3" hex bolt	16
Z451	3/8" hex lock nut	16
21065	STEP 1	1
X420	3/8" x 5" hex bolt	16
Z451	3/8" hex lock nut	20
X452	3/8" flat washer	32
Y418G8	3/8" x 4-1/2" hex bolt	4
X522	1/2" x 5-1/2" hex bolt	2
Z551	1/2" hex lock nut	2
20981L	large aluminum washer	2
21066	STEP 2	1
X712	3/4" x 3" hex bolt	1
Z751	3/4" hex lock nut	1
20890	5/32 allen wrench	1
22006	STEP 3/4	2
X412	3/8" x 3" hex bolt	8
Z451	3/8" hex lock nut	8
22001	reinforcing plate	4
22005	cable channel	2
CP10	1/2" X 2" cotter pin	2
HPC	hairpin cotter	2
X712	3/4" x 3" hex bolt	2
Z751	3/4" hex lock nut	2
21068	STEP 5	1
X412	3/8" x 3" hex bolt	16
Z451	3/8" hex lock nut	20
Y410G8	3/8" x 2-1/2" hex bolt	4


Ten/Two Year Limited Warranty

LSP, Inc. (Seller) warrants the aluminum structure on docks and lifts of its manufacture to be free from defects caused by material or workmanship for ten years from date of purchase. Seller will, at its option, repair or replace any such goods found on examination by Seller to be defective under normal use and service. Upon discovery of any such defect, Buyer must notify Seller in writing of defect and provide proof of purchase. Seller warrants all other materials including cast aluminum parts, mechanical components, hardware, canopy covers, cables, bunks, etc for two years. Components obtained from other manufacturers and used in Seller's products will be covered under the manufacturer's warranty and shall not be the responsibility of the Seller.

Seller's responsibility under this warranty shall be the repair or replacement of defective items. Seller is not liable for incidental or consequential damages of any kind.

Seller shall not be held responsible for repairs or modifications to its docks or lifts unless authorization has been obtained from Seller. This warranty does not cover damage caused by incorrect assembly or adjustments, overloading, improper use, neglected maintenance, alterations, or damage caused by accident, environmental factors (chemicals, tree sap, salt, etc), or acts of God (rainstorms, windstorms, tornadoes, etc).


LSV75120C Vertical Boat Lift, 7500 lbs. Capacity, 120" Beam Width, 50" Lift Height.

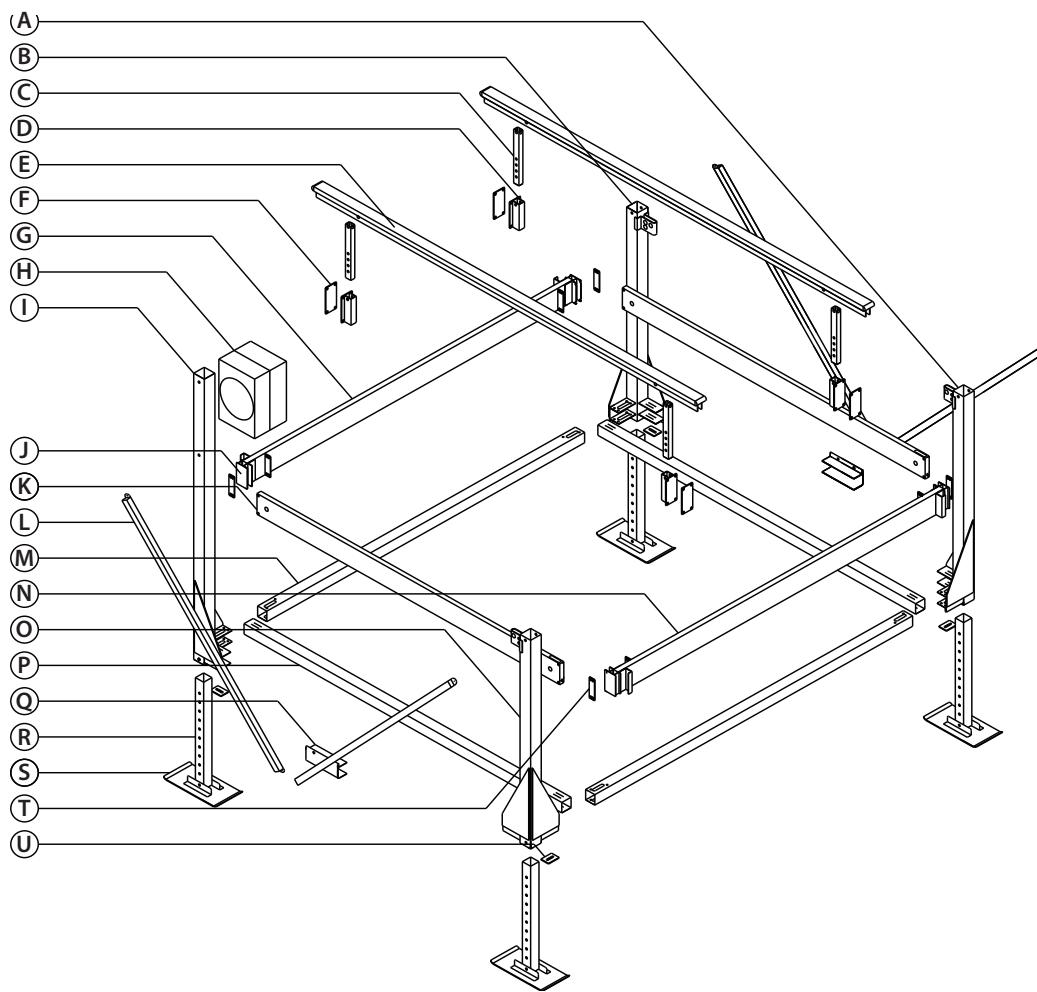

PARTS LIST LSV75120C

REF.	PART NO.	PART NAME	QTY.	REPLACEMENT PARTS	PART NO.	PART NAME	QTY.
A	21057	Mainframe Post #3	1				
B	21056	Mainframe Post #2	1				
C	BDL18	Bunk Down Leg	4		21061	Cable Lift P 3/8" x 305" SS	1
D	20902	Bunk Socket	4		21062	Cable Transfer Q 3/8" x 180" SS	2
E	BUNK75	Bunk Assembly	2		21063	Cable Leveling R 3/8" x 193" SS	2
F	20904	Bunk Socket Plate	4				
G	21053	Cradle Lifting	1				
H	W8	7500 lb. Motor	1				
I	21055	Mainframe Post #1	1				
J	21058	Cradle Corner Bracket	4				
K	21054	Cradle Spreader	2				
L	20840	Diagonal Brace	4				
M	20837	Mainframe Spreader 120"	2				
N	21053	Cradle Leveling	1				
O	21056	Mainframe Post #4	1				
P	20837	Mainframe Spreader 120"	2				
Q	20860	Diagonal Bracket	2				
R	20989	Leg Tube 36"	4				
S	20990	Foot Pad	4				
T	22001	Cradle Corner Reinforcing Plate	16				
U	21086	Cable Washer Plate	4				


LSV75120CP Vertical Pontoon Lift, 7500 lbs. Capacity, 120" Beam Width, 50" Lift Height

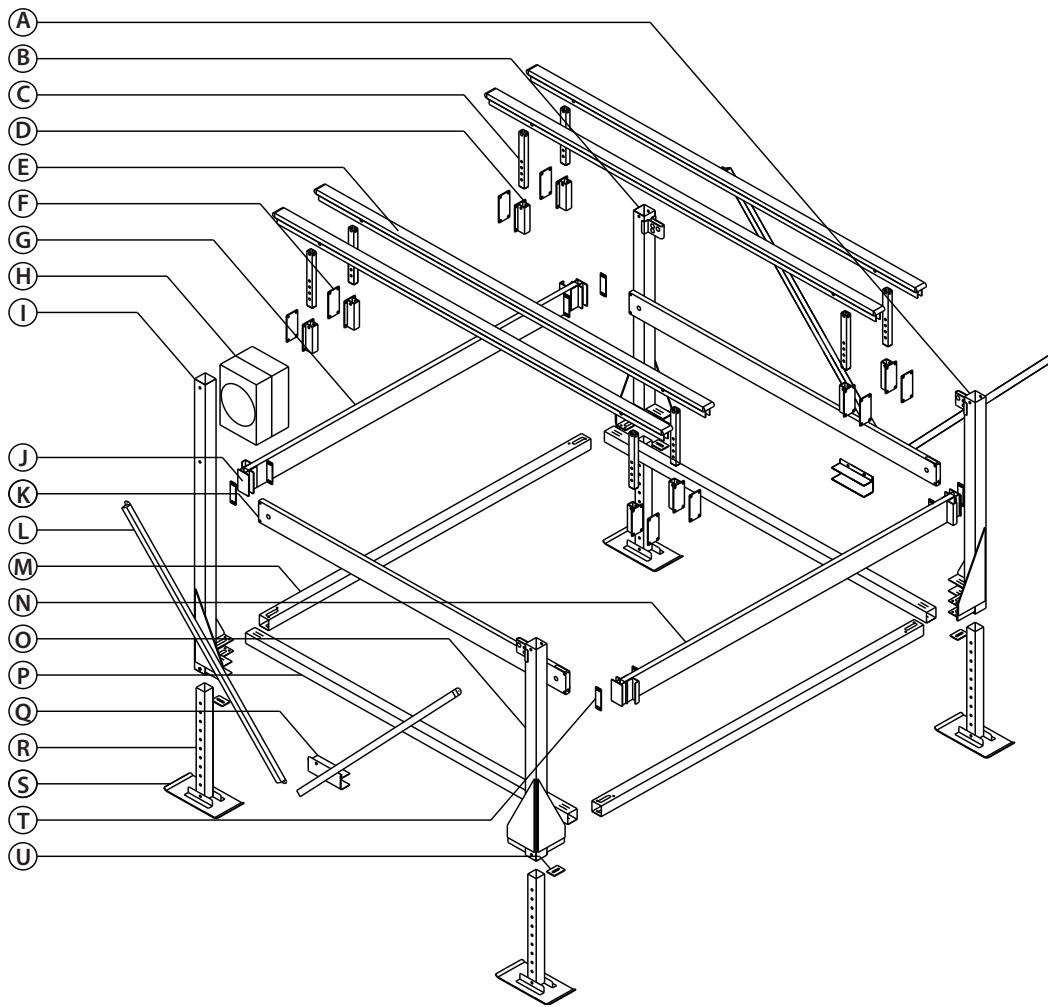

PARTS LIST LSV75120CP

REF.	PART NO.	PART NAME	QTY.	REPLACEMENT PARTS		QTY.
				PART NO.	PART NAME	
A	21057	Mainframe Post #3	1	21061	Cable Lift P 3/8" x 305" SS	1
B	21056	Mainframe Post #2	1	21062	Cable Transfer Q 3/8" x 180" SS	2
C	BDL18	Bunk Down Leg	4	21063	Cable Leveling R 3/8" x 193" SS	2
D	20902	Bunk Socket	8			
E	BUNK75	Bunk Assembly	4			
F	20904	Bunk Socket Plate	8			
G	21053	Cradle Lifting	1			
H	W8	7500 lb. Motor	1			
I	21055	Mainframe Post #1	1			
J	21058	Cradle Corner Bracket	4			
K	21054	Cradle Spreader	2			
L	20840	Diagonal Brace	4			
M	20837	Mainframe Spreader 120"	2			
N	21053	Cradle Leveling	1			
O	21056	Mainframe Post #4	1			
P	20837	Mainframe Spreader 120"	2			
Q	20860	Diagonal Bracket	2			
R	20989	Leg Tube 36"	4			
S	20990	Foot Pad	4			
T	22001	Cradle Corner Reinforcing Plate	16			
U	21086	Cable Washer Plate	4			

LSV75120CP-U Vertical Pontoon Lift, 7500 lbs. Capacity, 120" Beam Width, 50" Lift Height

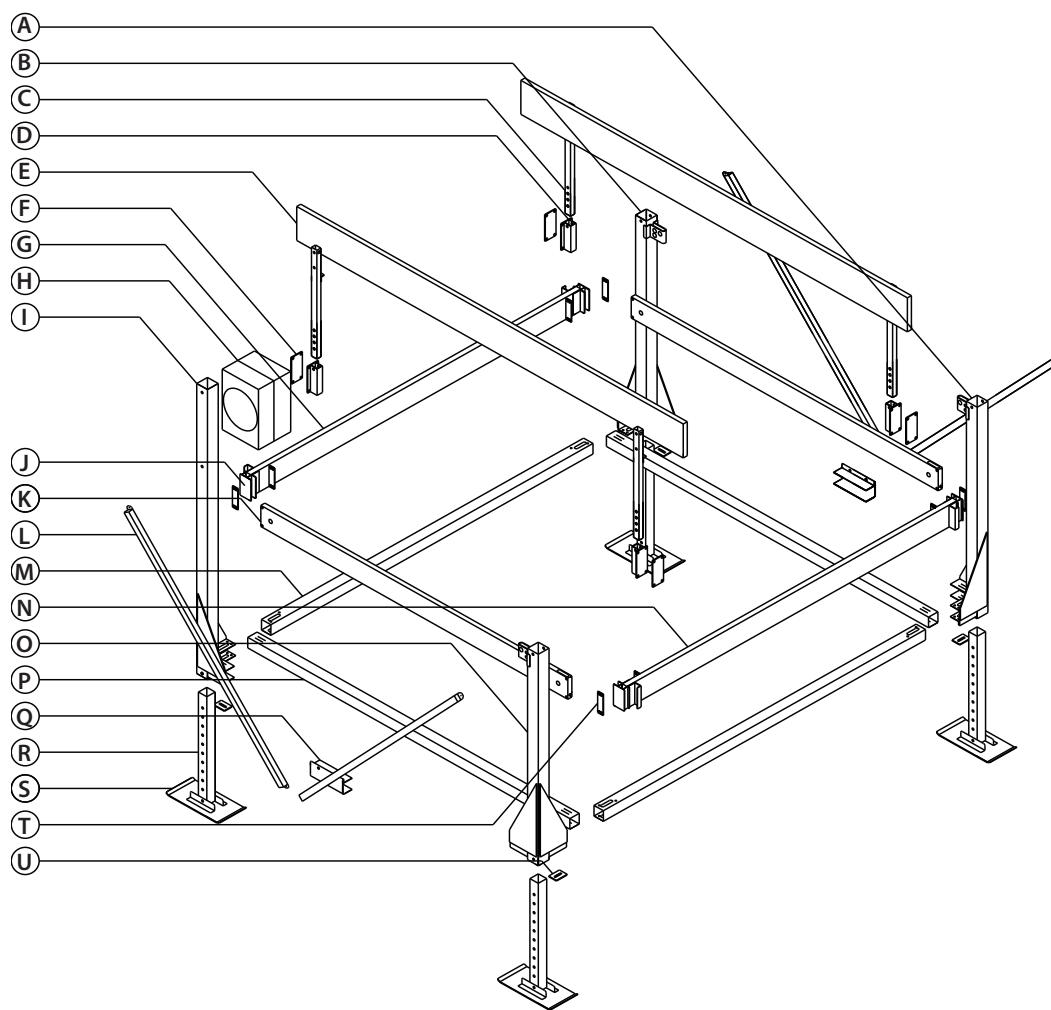

PARTS LIST LSV75120CP-U

REF.	PART NO.	PART NAME	QTY.	REPLACEMENT PARTS		
				PART NO.	PART NAME	QTY.
A	21057	Mainframe Post #3	1	21061	Cable Lift P 3/8" x 305" SS	1
B	21056	Mainframe Post #2	1	21062	Cable Transfer Q 3/8" x 180" SS	2
C	20895	Under Deck Down Leg	4	21063	Cable Leveling R 3/8" x 193" SS	2
D	20902	Bunk Socket	4			
E		2 x 12 x 16' SYP (purchased locally)	2			
F	20904	Bunk Socket Plate	4			
G	21053	Cradle Lifting	1			
H	W8	7500 lb. Motor	1			
I	21055	Mainframe Post #1	1			
J	21058	Cradle Corner Bracket	4			
K	21054	Cradle Spreader	2			
L	20840	Diagonal Brace	4			
M	20837	Mainframe Spreader 120"	2			
N	21053	Cradle Leveling	1			
O	21056	Mainframe Post #4	1			
P	20837	Mainframe Spreader 120"	2			
Q	20860	Diagonal Bracket	2			
R	20989	Leg Tube 36"	4			
S	20990	Foot Pad	4			
T	22001	Cradle Corner Reinforcing Plate	16			
U	21086	Cable Washer Plate	4			